


THANKS!

Thank you for purchasing this Croydex toilet seat which uses the Sit Tight™ hinge fixing system. Please follow the fixing and care instructions to ensure that your toilet seat is fitted safely and that it retains its high quality finish. Please retain this leaflet for future reference.

Tools Required - not supplied

Pencil.

KEEP DIY TOOLS OUT OF REACH OF CHILDREN

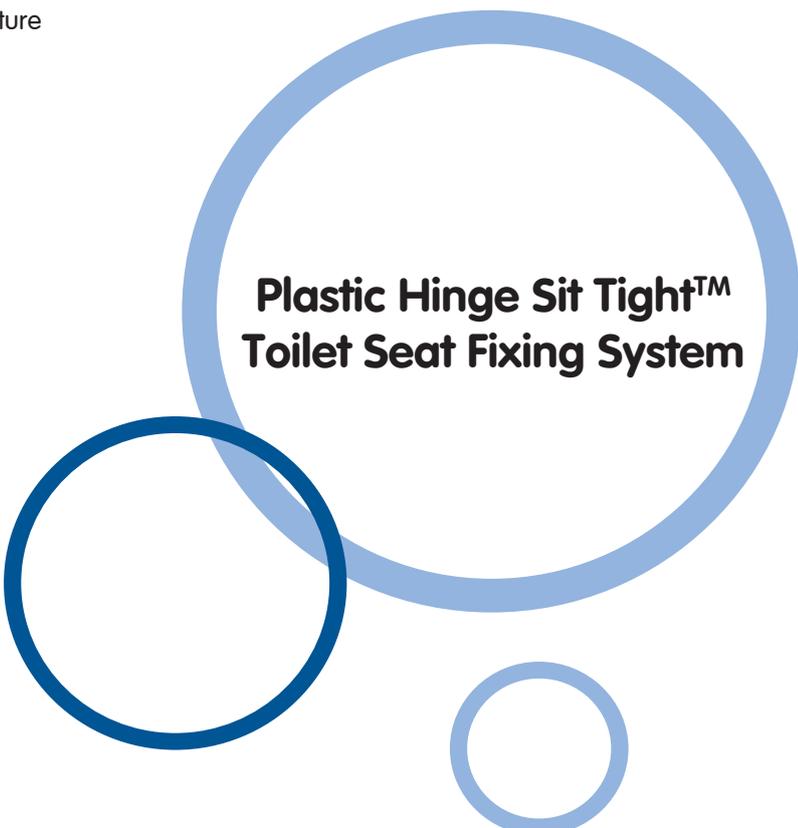

Plastic Hinge Sit Tight™ Toilet Seat Fixing System

Before You Start

- To prevent dropping small parts into the toilet whilst fitting the Sit Tight™ hinge system, stretch a piece of cling film over the rim of the toilet to cover the bowl and remove after installation.
- Does your seat fit your pan? Try our Toilet Seat Compatibility Spreadsheet available at www.croydex.com

Home Safety Advice

- Do not use power screwdrivers to assemble this product.
- Do not strike the product with hard or sharp objects.
- Do not stand on the lid or the seat.


Important Adhesive Information - Read before fitting

- When removing old seat remove any debris and clean pan thoroughly.
- Thoroughly clean and dry the surface of the toilet pan where the hinge is to be fitted to remove any dirt, limescale residue or contamination that may reduce the performance of the adhesive.
- The bonded hinge components can be easily removed from the toilet pan if required by twisting them in an anti-clockwise direction.
- Any adhesive residue can be removed by carefully scraping the surface of the toilet pan with a blunt tool.
- Be careful not to over-tighten your hinge on installation as this can cause high stress on your hinge.


Product Care

- To retain the best quality finish, clean product with a soft cloth and a mild soap solution.
- Take care when cleaning the toilet pan with chemical cleaners. Avoid contact of the chemical cleaners with the toilet seat or hinges. Immediately rinse off any splashes to avoid damage or discolouration of the surface of the toilet seat, or corrosion of the metal and plated parts.
- **Do not use abrasive or chemical cleaners as they may damage the Toilet Seat or Hinges.**


Parts for the Plastic Hinge Fixing

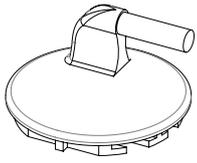


A. LHS Hinge Top
x1

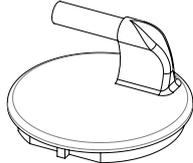

B. RHS Hinge Top
x1

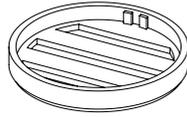

C. Hinge Base Plate
x2

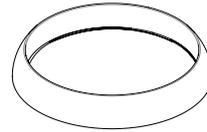

D. Lock Ring
x2



E. Fixing Bolt
x2




F. Tapered Plastic Washer
x2



G. Plastic Nut
x2



H. Adhesive Tube
x1

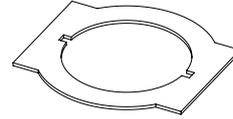

I. Card Template
x2



J. Adhesive Tape Roll
x1

Instructions to install Plastic Hinge Fixing

Note: Some images shown for reference only.

1. Place Card Templates over Fixing Holes

Ensure the ceramic surface is dry, then place a card template over each fixing hole on the toilet pan in the orientation shown, so that the two small cut outs on the inside hole on the template are running left to right as you face the toilet pan.

Fig. A

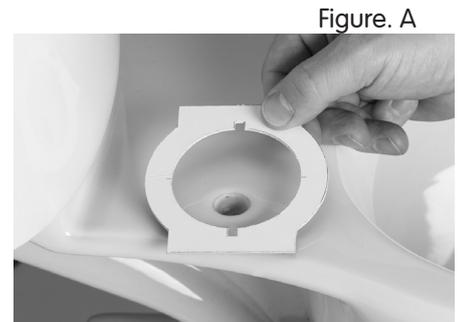


Figure. A

2. Place Hinge Base Plate and rotate to horizontal

Next place a lock ring into each template and a hinge base plate into each lock ring. Rotate each hinge base plate within the lock ring so that the three slots run horizontally left to right as you face the toilet pan and line it up with the cut outs in the template.

Fig. B



Figure. B

3. Slide a Fixing Bolt into each Hinge Tops

Separate the left and right hand side hinge tops by snapping the thin plastic sprue that connects them. Make sure that the sprue is completely removed from both sides as this could interfere with the hinge base plate when the parts are assembled together. Next slide one fixing bolt into the middle channel on the underside of each hinge top.

Fig. C



Figure. C

4. Insert the Hinge Tops into the seat.

Attach the hinge tops to the toilet seat so that the base of the hinge top faces downwards. The hinge tops are left and right handed as shown in the pack content illustrations but these are side reversible to allow further adjustment of the toilet seat on the toilet pan, either forwards or backwards as required.

Fig. D



Figure. D

5. Insert Toilet Seat onto Pan

Next place the toilet seat onto the toilet pan ensuring that the fixing bolts pass through the corresponding middle slots on each hinge base plate and also through the two fixing holes on the toilet pan.

Fig. E



6. Align Toilet Seat

Align the toilet seat with the toilet pan. **Ensure that the seat is far enough forward to allow the seat to remain upright when lifted.** If adjustment is required the other slots on the underside of the hinge tops can be used to move the seat position either forwards or backwards. N.B. Refer back to step 4 for additional adjustment if required.

7. Tape Templates and carefully remove Seat

Once the correct toilet seat position is determined ensure the small cut outs on the templates are aligned horizontally, then stick both templates down using the adhesive tape provided. Carefully remove the seat, hinge base plates and lock rings, leaving both templates in position on the toilet pan.


Fig. F



8. Remove backing and place Lock Ring

Peel off the protective backing from the adhesive tape on the underside of the lock ring. Place the lock ring inside the template and firmly push down to allow the adhesive tape to stick to the top of the toilet pan. Repeat for the other side.


Fig. G & Fig. H

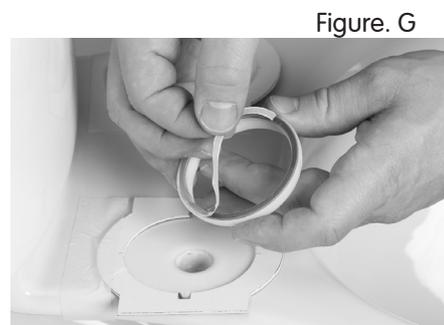

9. Apply Glue! Half to each component

Take one hinge base plate and apply the contents of one tube of the supplied adhesive to all of the underside ensuring to give a thick even coverage.


Fig. I

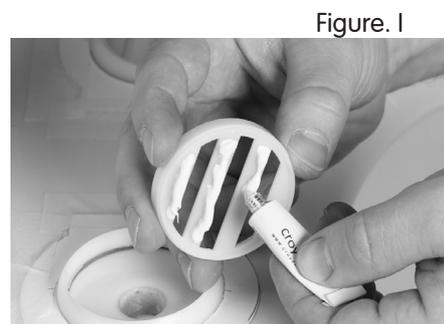

10. Firmly place Hinge Base Plate horizontally

Place the hinge base plate back into the lock ring making sure that the slots run horizontally left to right and line up with the cut outs on the card template. Once aligned push the hinge base plate down until fully seated in the lock ring. Excess adhesive will be visible when it is expelled from the underside of the hinge base plate, do not clean this adhesive up as it is integral to aiding the strength of the bond between the hinge base plate and the toilet pan surface..

Fig. J

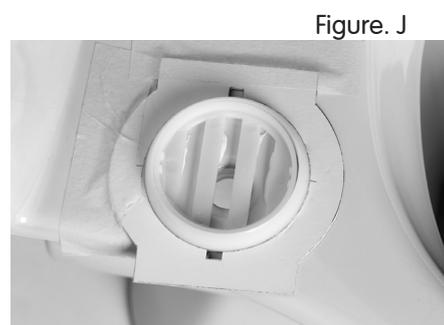


11. Repeat 9 & 10

Repeat steps 9 and 10 for fitment of the other hinge base plate using the second tube of adhesive.

Figure. K

TAPERED PLASTIC WASHER

PLASTIC NUT

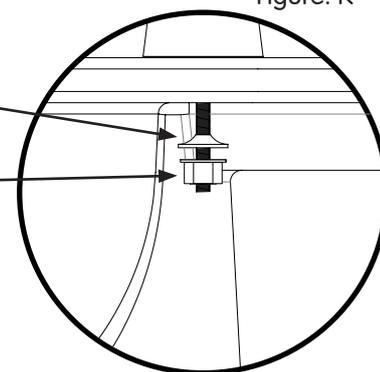

12. Carefully remove Card Templates

When both hinge base plates are fitted, carefully remove both card templates ensuring that the lock rings are not disturbed and remain fully adhered to the toilet pan.

Figure. L

13. Fit Toilet Seat

Fit the toilet seat by locating the hinge tops into the hinge base plates and passing the fixing bolts through the correct slots in the bracket assemblies.

N.B. Location notches have been moulded into the two mouldings to ensure that when they fit together the slots are accurately aligned. It may be necessary to rotate the hinge base plate slightly to allow the hinge top to fit into it.



14. Fix Toilet Seat into place

Assemble a tapered plastic washer and plastic nut onto the exposed end of each fixing bolt as shown in **Fig. K** and fully tighten the nuts **Fig. L**.

Be careful not to over-tighten.

For details of the other items in the Croydex range please visit our website: www.croydex.com

Croydex Limited, Central Way, Andover, Hampshire, SP10 5AW, UK
Tel: +44 (0) 1264 365881 Fax: +44 (0) 1264 356437
E-mail: info@croydex.co.uk